

# Leader

---

## LV5600/ LV7600/ LV5300/ LV5350/ LV7300

### Software Update & Initialize Procedures

#### Software Update procedure

##### Preparation

- Unzip an update file
- Store only an update data folder “ LV5600\_5350\_5300\_7600\_7300\_UPDATE” directly to the root directory of a USB memory.

**Caution: Please DO NOT store any other file or data in the USB**

File data configuration is hereunder;

LV5600\_5350\_5300\_7600\_7300\_UPDATE \_\_\_\_\_

lv5600\_5350\_5300\_7600\_7300\_update\_vxx\_xx\_xx\_yyymmdd

- Make backup save of the last memory before the update, otherwise the last memory will be deleted.
1. Power ON and plug the USB to the USB connector in the front panel of LV5600/ LV7600/ LV5300/ LV5350/ LV7300 to be recognized.
  2. Press **SYS**
  3. Press **[F7] INITIALIZE**.
  4. Press **[F7] FIRMWARE UPDATE**
  5. Press **[F3] UPDATE YES** to start update.  
(If rebooting starts, you may remove the USB out)
  6. Wait a few minutes during update.
  7. To check the firmware version, press **SYS**→**[F3] SYSTEM INFO**
  8. End

# Leader

---

## Initialize procedure

### Setting initialization

1. Press **SYS [F7] INITIALIZE**
2. Press **[F1] PARAM INIT YES**
3. All items are initialized except for the blow
  - Network setting (**NETWORK** tab)
  - Remote setting (**REMOTE** tab)
  - RS-422/485 setting (**RS485** tab)
  - Camera ID setting without Local ID setting (**Camera ID** tab)
  - Date setting (**DATE & TIME** tab)
  - Preset contents
  - Layout of the display
4. To cancel initializing, press **[F5] INIT CANCEL**

### Layout initialization

1. Press **SYS [F7] INITIALIZE**
2. Press **[F2] LAYOUT INIT YES**
3. All layout set on each display (total 11 kinds) is initialized.
4. To cancel initializing, press **[F5] INIT CANCEL**

### Operation key initialization

1. Press **SYS [F7] INITIALIZE**
2. Press **[F3] OPERATE INIT YES**
3. To cancel initializing, press **[F5] INIT CANCEL**

### Setting & Layout simultaneous initialization

1. Press **SYS [F7] INITIALIZE**
2. Press **[F3] ALL INIT YES**
3. To cancel initializing, press **[F5] INIT CANCEL**

### Reset to the factory default

1. Power ON pressing V POS and H POS.
2. Release after 3 seconds
3. Press **[F3] SRAM/FLASH INIT YES**