

Leader

SFR-Fit

MTF Measurement Software FS3170

Installation / License Manual (Trial License)

Please read this instruction manual carefully to ensure safe use of the product.

CONTENTS

1.	Product configuration.....	1
1.1	Software	1
1.2	License Key	1
1.3	Difference Between Trial Version and Product Version.....	1
2.	Install	2
2.1	Installing Software and MATLAB Runtime	2
2.1.1	About Installation	2
2.1.2	Installation Procedure.....	2
2.2	Installing CodeMeter Runtime	6
2.2.1	About Installation	6
2.2.2	Installation Procedure.....	6
3.	Trial License Activation.....	9
3.1	About Trial License	9
3.2	Activation Method	9
4.	License Confirmation	10
4.1	Checking Activation Status	10
5.	Message at Software Startup	12
5.1	Start Error.....	12
5.2	No license found!	12
5.3	Licensing almost expired!.....	13
5.4	Your license has expired!.....	14
5.5	Support Page.....	14

1. Product configuration

1.1 Software

1. SFR-Fit installer (including MATLAB Runtime)
SFR_Fit_v**_trial_Installer_web.exe
2. CodeMeter Runtime Installer
CodeMeterRuntime.exe

1.2 License Key

1. Trial license file
SFR-Fit_Trial_0_30.WibuCmRaU

1.3 Difference Between Trial Version and Product Version

		Trial version	Product version
Period of use		30 days (From the first boot)	1 year (Subscription)
CSV file output (Output Data)		Not supported	Supported
JSON file output	Measured value	Not supported	Supported
	Set value	Supported	Supported
Number of chart displays		1	9
Number of ROIs		1	81
SFR Viewer JSON function		Not supported	Supported

* For functions other than the above, the trial version is equivalent to the product version.

2. Install

2. Install

2.1 Installing Software and MATLAB Runtime

2.1.1 About Installation

"SFR_Fit_v**_trial_Installer_web.exe" is the installer.


This software, "SFR-Fit" and "MATLAB Runtime" will be installed.

- * MathWorks' "MATLAB Runtime" is a collection of shared libraries and code that makes software executable.


2.1.2 Installation Procedure

(1) If MATLAB Runtime is not yet installed


1. Double-click "SFR_Fit_v**_trial_Installer_web.exe" to start installation.
2. Click "Next."

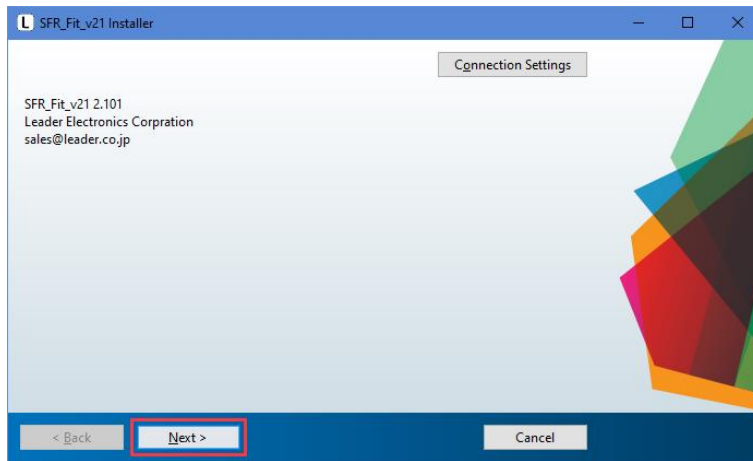

3. Click "Next."

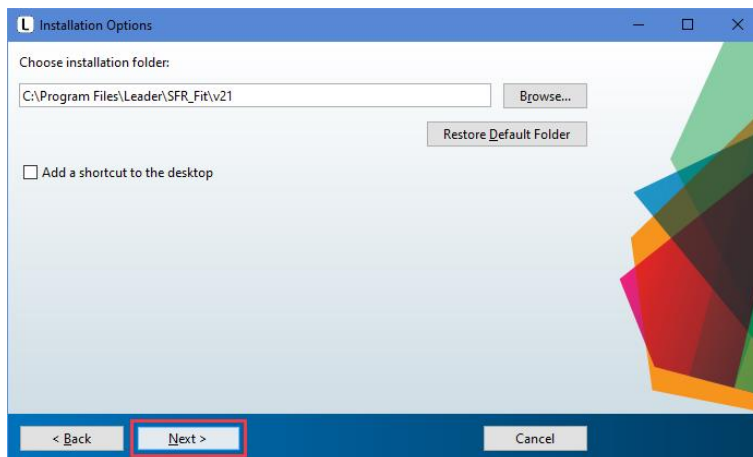


 To create shortcuts, check the following.




2. Install


4. Click "Next."

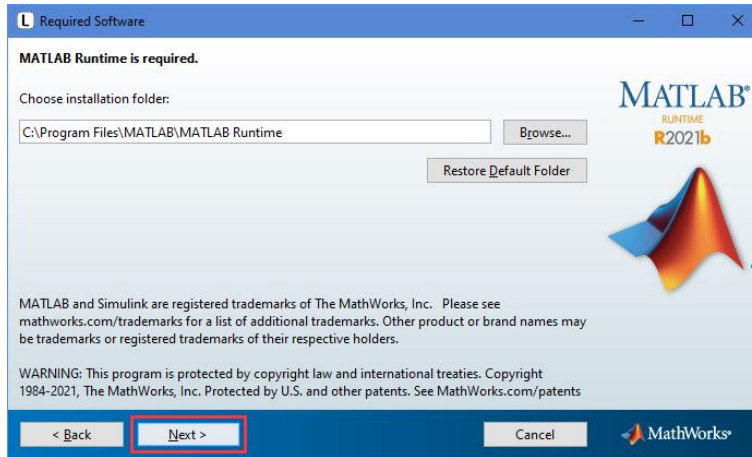

5. "Do you accept the terms of the license agreement?" check the box and click "Next."

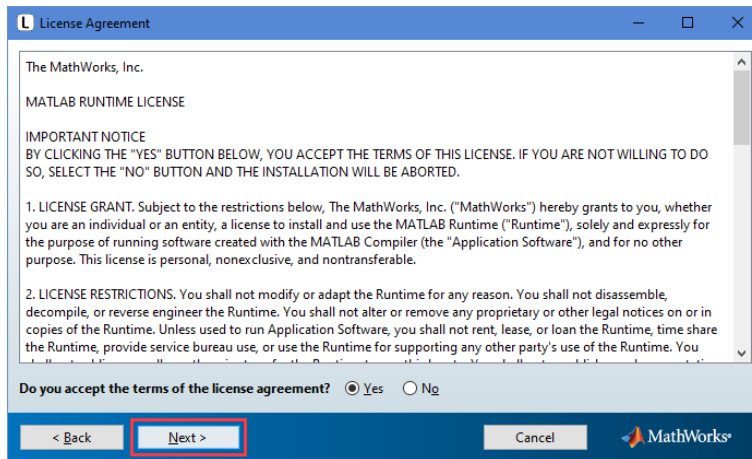

6. Click "Install."

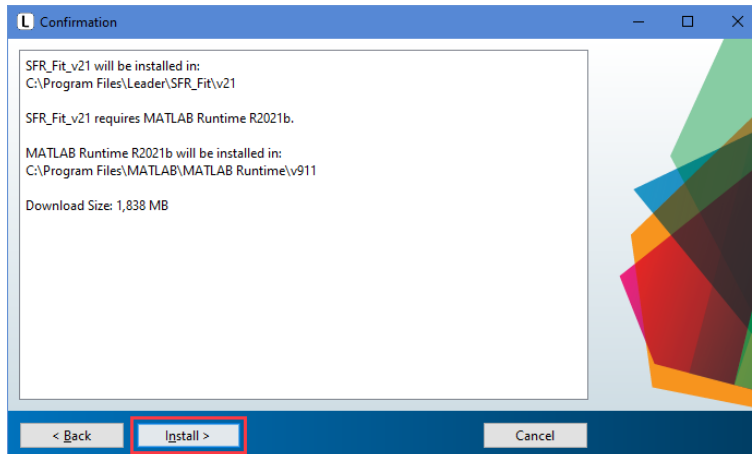


Install MATLAB Runtime, so it will take some time.

* It takes about 10 to 30 minutes, depending on the environment.


2. Install

7. Click "Finish" to end the installation.

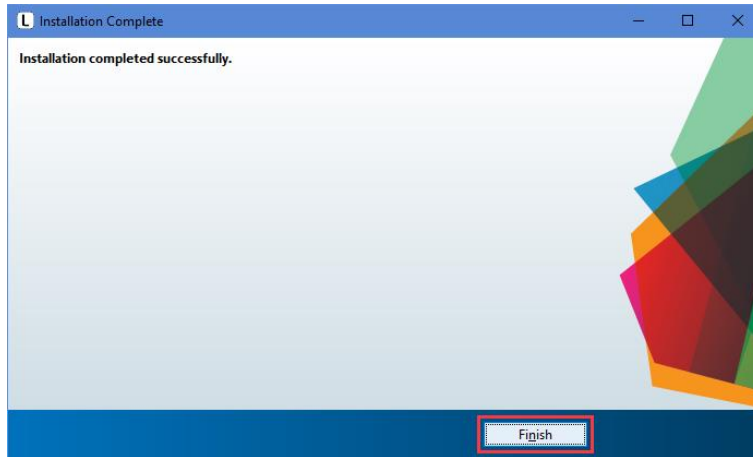


- (2) If MATLAB Runtime is already installed


1. Double-click SFR_Fit_v**_trial_Installer_web.exe to start.
2. Click "Next."

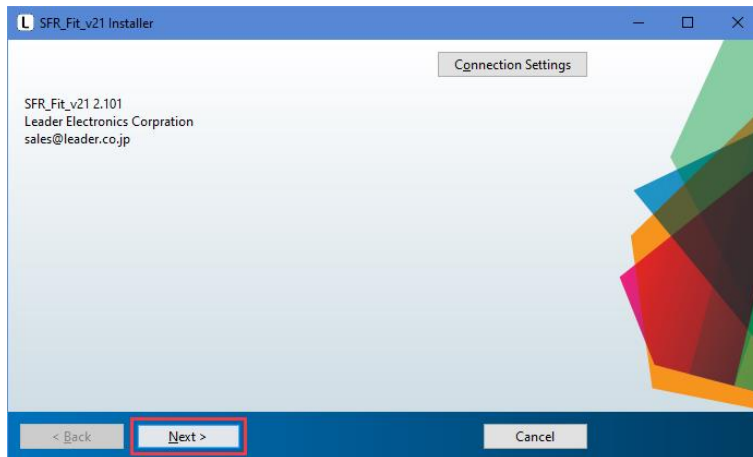

3. Click "Next."

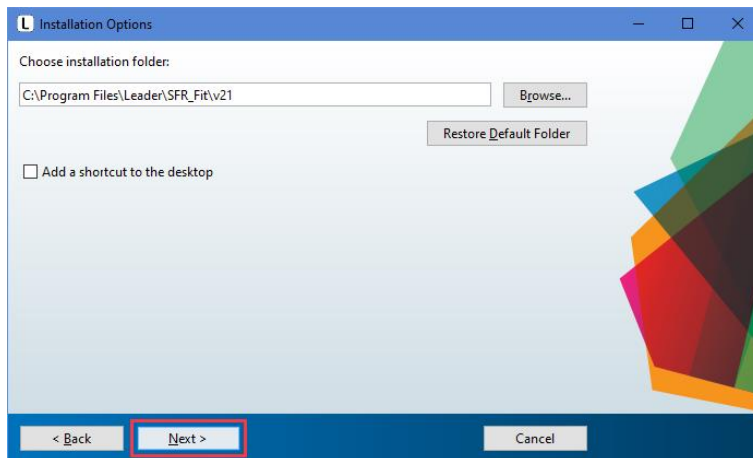


 To create shortcuts, check the following.




2. Install


4. Click "Next."

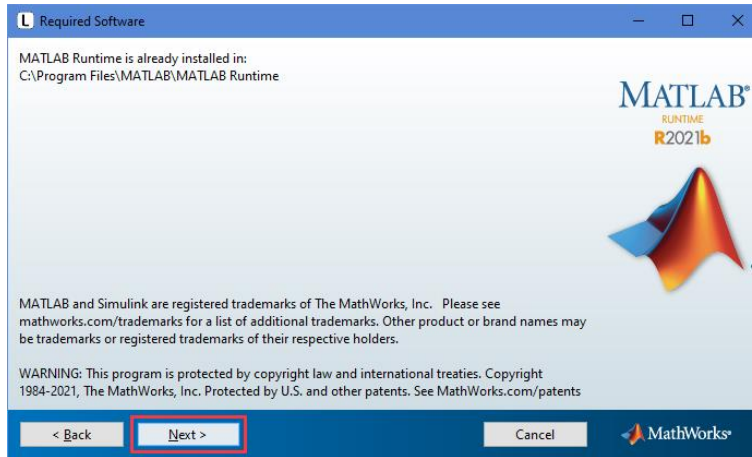

5. Click "Install."

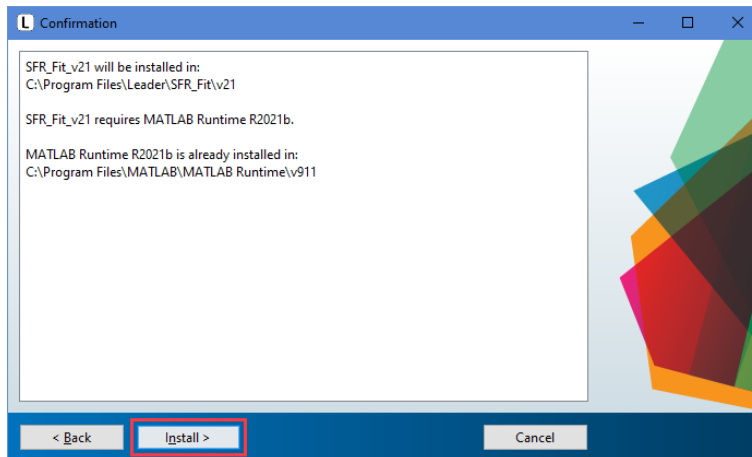

6. Click "Finish" to end the installation.

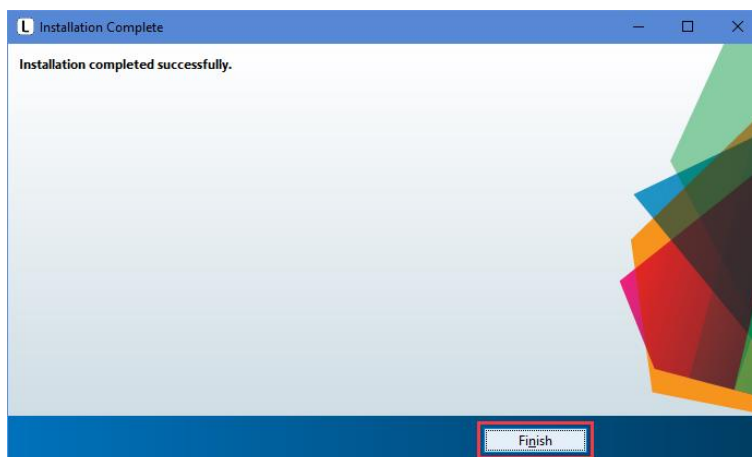

2. Install

2.2 Installing CodeMeter Runtime


2.2.1 About Installation

CodeMeterRuntime.exe" is an installer.


- * WIBU-SYSTEMS' "CodeMeter Runtime" is a tool for license management and activation process to run software.

2.2.2 Installation Procedure

1. Double-click "CodeMeterRuntime.exe" to start installation.
2. Click "Next."

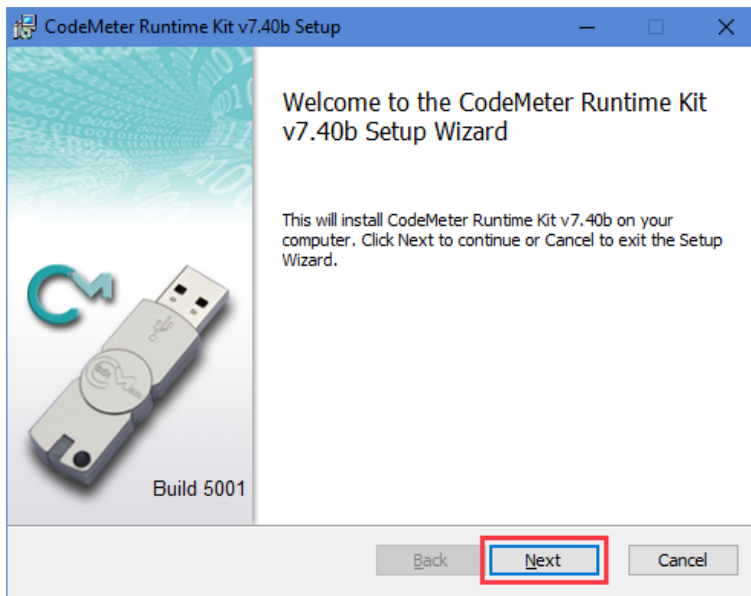


3. Check "I accept the terms in the License Agreement" and click "Next."

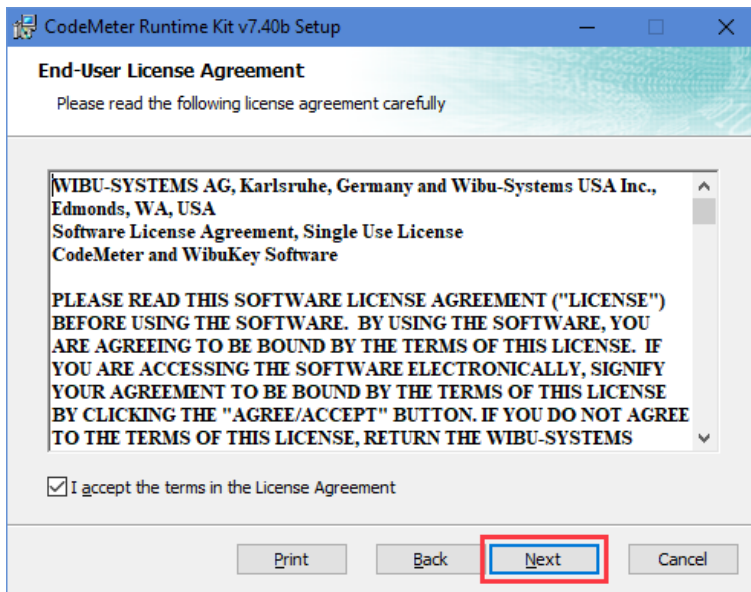


2. Install

4. Click "Next."

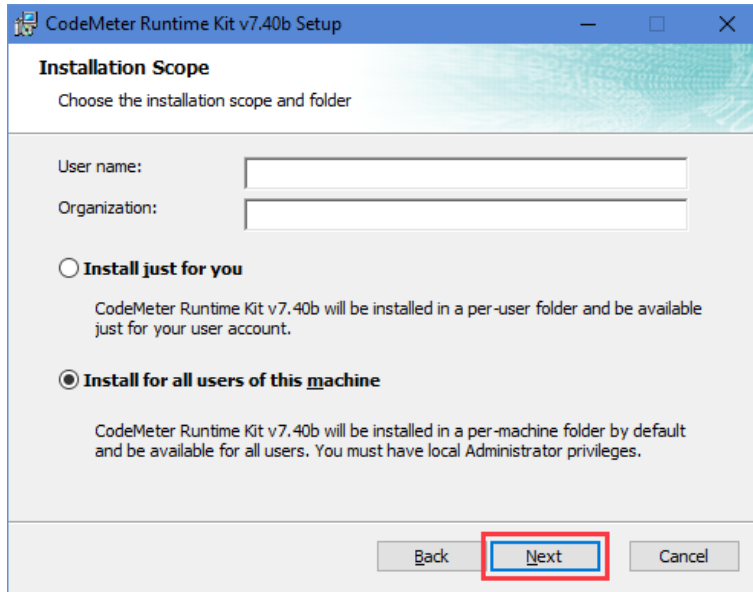


5. Click "Next."

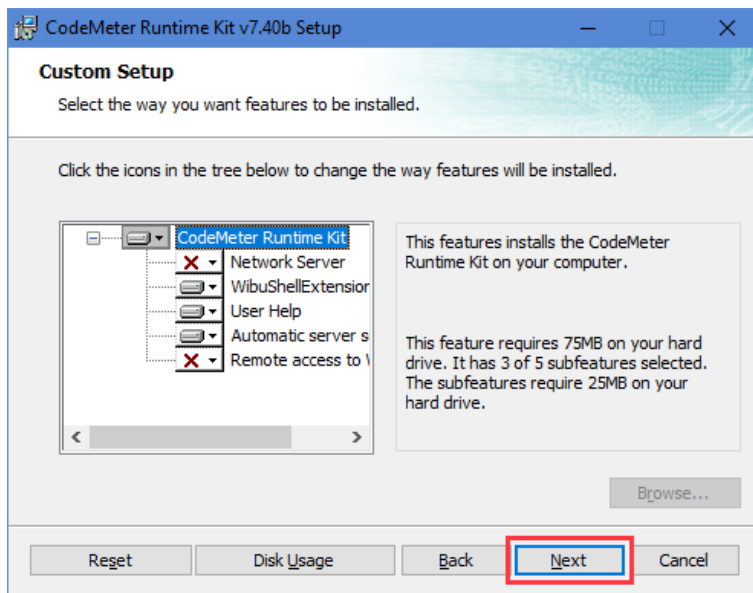


2. Install

6. Click "Install."

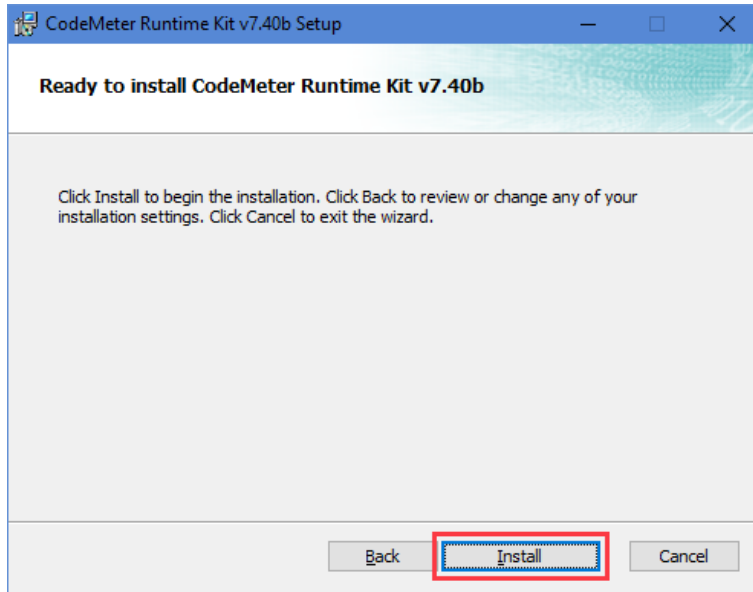

7. Click "Finish" to finish the installation.

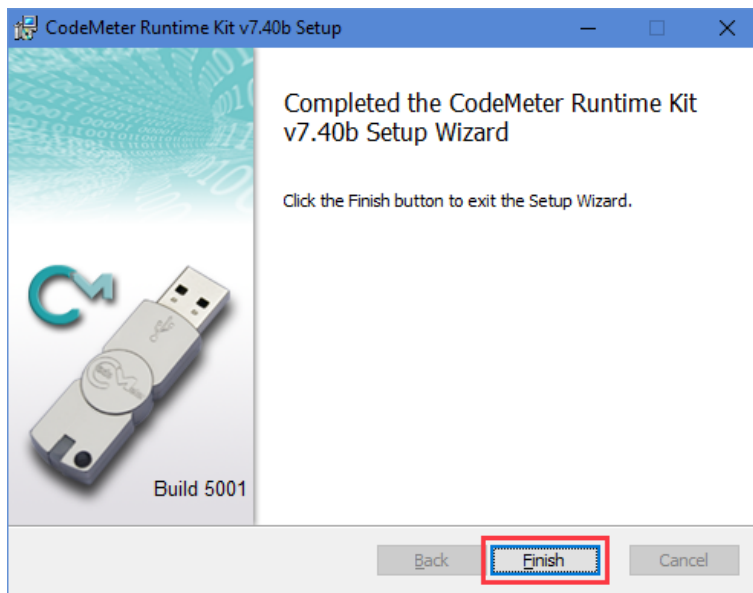

3. Trial License Activation

3.1 About Trial License

The trial license is valid for 30 days.

Counting begins on the date of first launch of this application.


3.2 Activation Method

1. Double-click the trial license file "SFR-Fit_Trial_0_30.WibuCmRaU".
2. The "CodeMeter Control Center" will start and the file will be imported.
3. When the import is successful, a pop-up window will appear
4. Click the "OK" button to exit "CodeMeter Control Center".


4. License Confirmation

4.1 Checking Activation Status

1. To check the license, right-click the "CodeMeter icon" in the "Windows Taskbar" and click "WebAdmin".

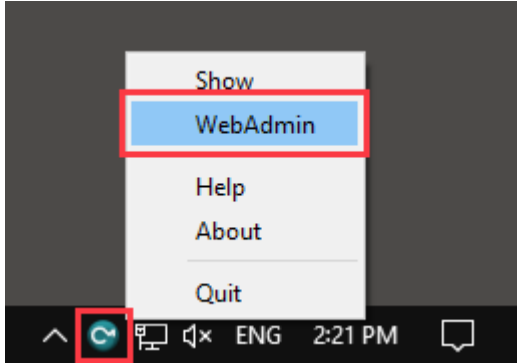


Or, from "Start", click "CodeMeter" -> "CodeMeter Control Center" -> "WebAdmin".
"WebAdmin" will be displayed in your browser.

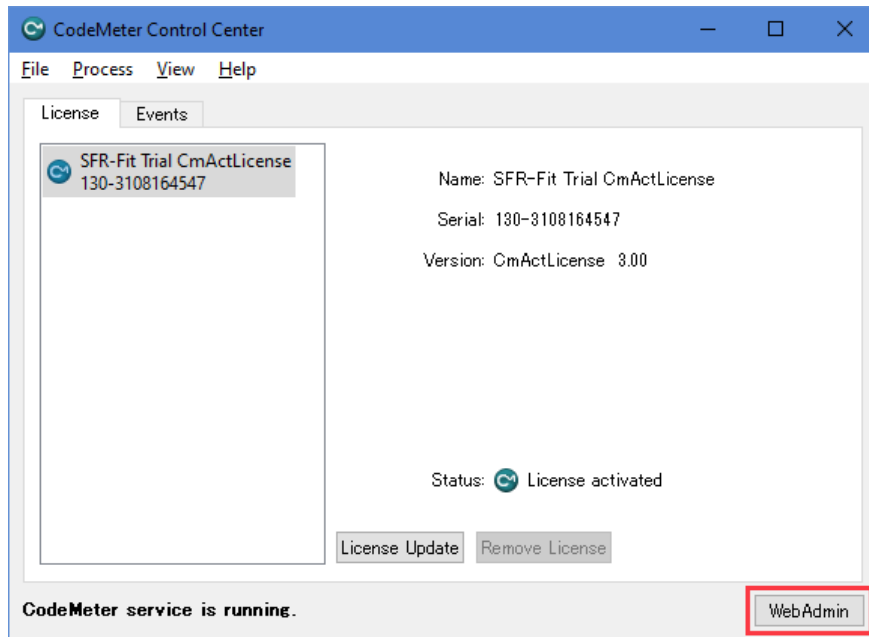

4. License Confirmation

2. Description of the "WebAdmin" screen

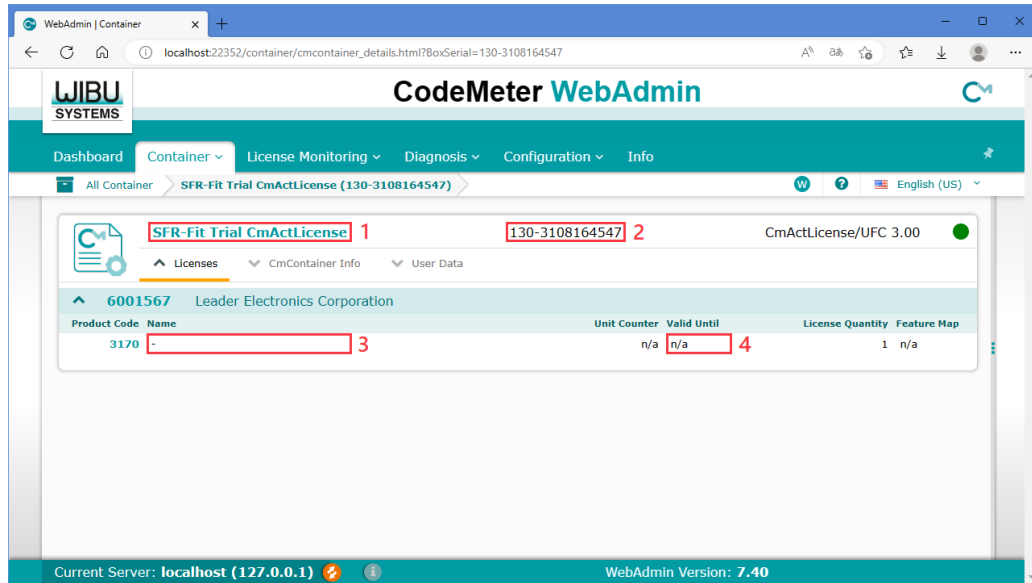

No.	Explanation.
1	Name of CmContainer
2	CmContainer serial number
3	License Name
4	License expiration date

5. Message at Software Startup

5.1 Start Error

This message is displayed when "CodeMeter Runtime" is not installed. Refer to "2 Install" to install "CodeMeter Runtime".



5.2 No license found!

License activation has not been completed. Refer to "3 Trial License Activation" to activate the license.




Button	Explanation.
Retry	Not used.
Cancel	Exit the application.
Contact	Open the Reader Electronics support page as shown in Section " 5.5 Support Page. "

5. Message at Software Startup

5.3 Licensing almost expired!

This message is displayed when the license expiration date is less than 60 days. Please contact our sales representative for renewal procedures

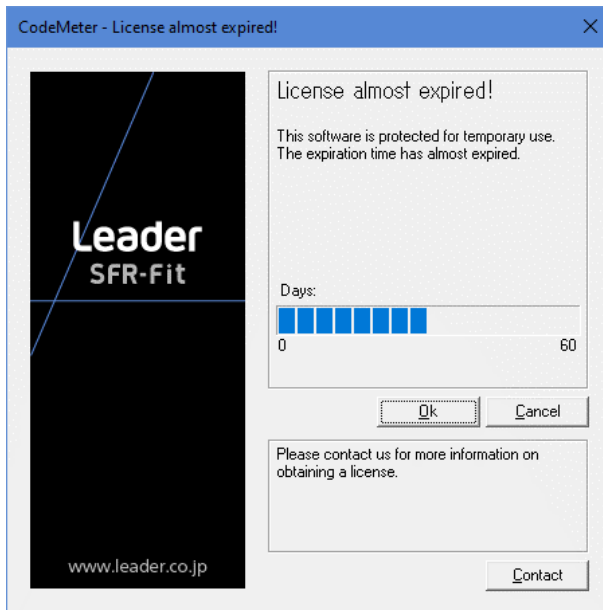

Button	Explanation
Ok	Launch the application.
Cancel	Exit the application.
Contact	Open the Reader Electronics support page as shown in Section " 5.5 Support Page. "

5. Message at Software Startup


5.4 Your license has expired!

This message is displayed when the license expires.
Please contact our sales representative for renewal procedures.



Button	Explanation
Retry	Not used.
Cancel	Exits the application
Contact	Open the Reader Electronics support page as shown in Section " 5.5 Support Page. "

5.5 Support Page

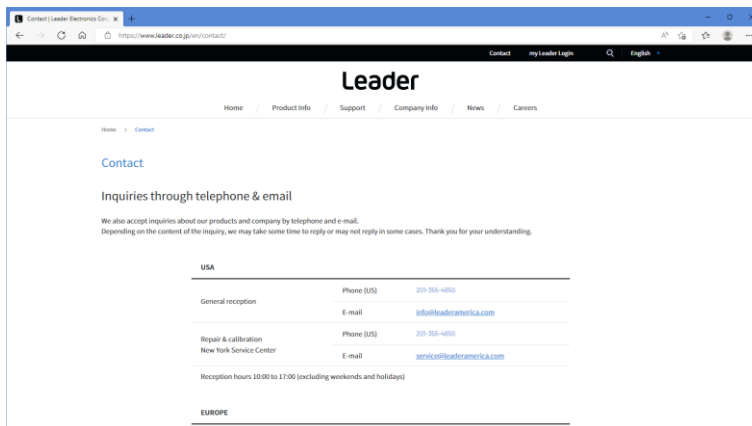

Leader Electronics Corporation

2-6-33 Tsunashima-higashi, Kohoku-ku, Yokohama-shi,
Kanagawa, 223-8505, Japan
www.leader.co.jp/en

May 11, 2023 Ver. 2